

EZLOFT™ Set-up

PATENT NUMBER 7203980




1. Hook beddeck into endframe slots and seat by pushing down. (For typical height for beddeck... match top hook of the plate into fifth slot from top of upright.)



2. Unfold EZloft™.



3. Set bed onto the EZloft™ and push down to seat connectors.

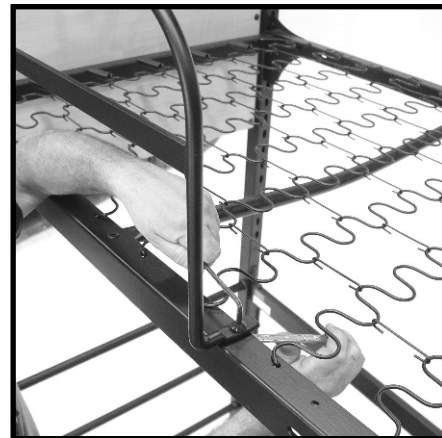

4. Install optional safety rail with supplied hardware into pre-punched holes in beddeck.



5. Assembled EZloft™ with optional safety rail.

IRONWOOD *Next*™

KLN STEEL PRODUCTS CO.
SAN ANTONIO, TEXAS 78265
800-624-9101

KLN 59500074 ©6/13/2005

This drawing is the property of KLN Steel Products and cannot be reproduced in whole or part without permission. KLN reserves the right to make product changes and improvements without notice.